



Fixation of optical head

- flowIQ and MULTICAL 21 water meters can be read out and configured via the build in optical interface
- In order to communicate with the meter the optical head must be positioned as shown on the photo
- Order numbers
 - Fixation for optical head : 6561-331
 - Optical head with USB : 6699-099
 - Optical head with RS-232 : 6699-102

